



TAWD

緯凡金屬股份有限公司
TRANSWORLD STEEL ENTERPRISE CO., LTD

Operation & Maintenance Manual

Product Name: One Piece Ball Valve

Product Type: Series E301

Author: Alice Sun
Review: Felix Zheng
Approval: Adam Shih

Date: February 29, 2024
Date: February 29, 2024
Date: March 5, 2024

Version: 1.0

Status: Released on March 8, 2024)

Headquarters: No. 34, Gongye 14th Rd., Taichung City, 412038, Taiwan (R.O.C.)

TEL: +886-04-22716107 | Email: info@tawdvalve.com


INSTALLATION & MAINTENANCE MANUAL

For Series E301

1. Product Structure


One-piece ball valve has a single, solid cast body that reduces the risk of fluid leakage. It's typically considered disposable because it is difficult to repair for maintenance.

Series E301-10

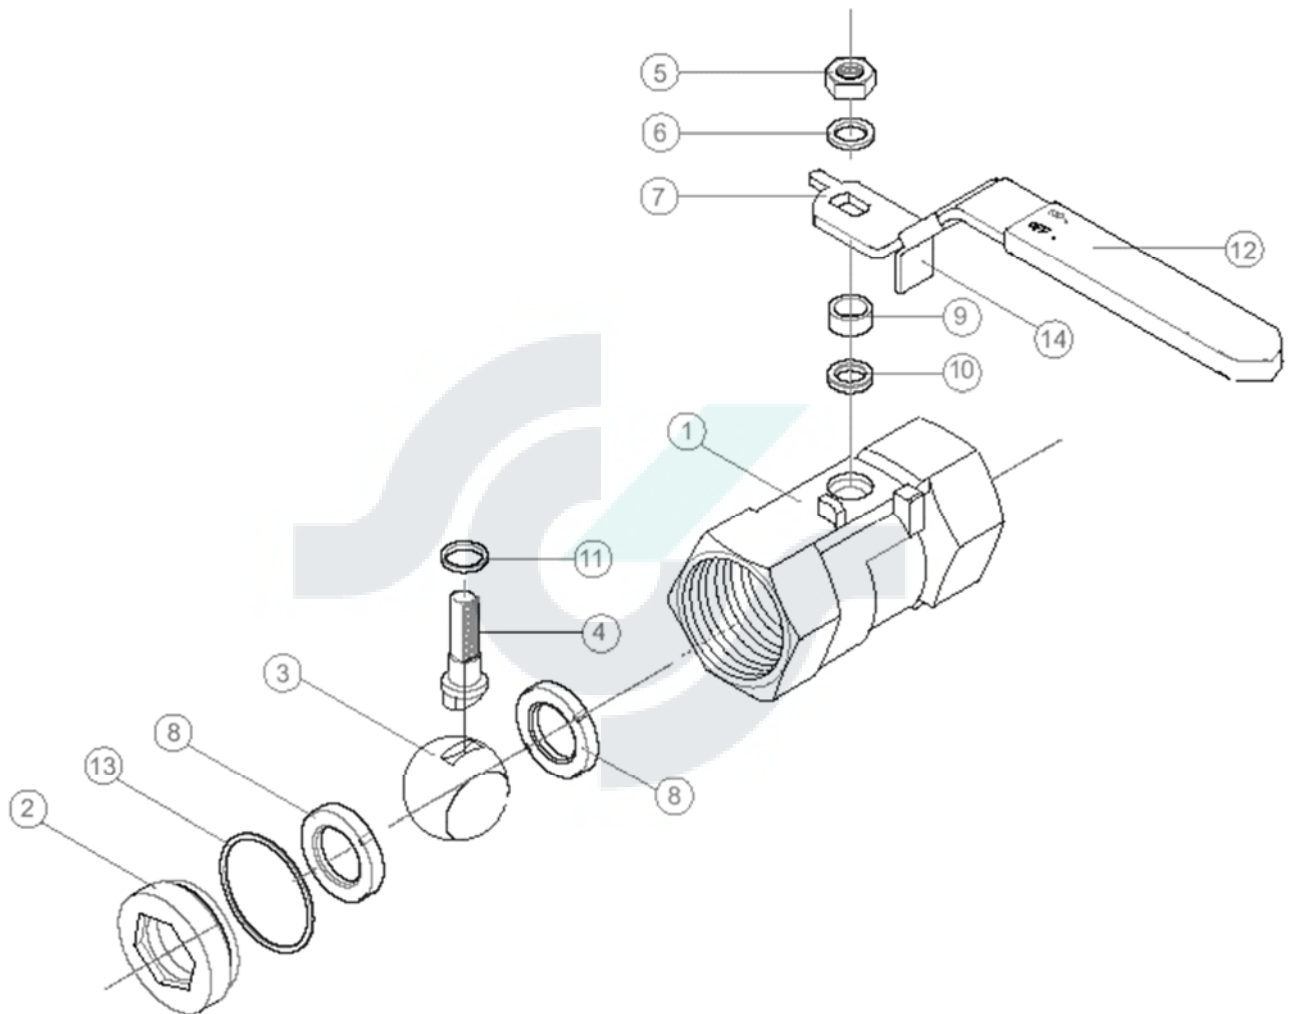

| No. | Part Name | No. | Part Name | No. | Part Name |
|-----|-----------|-----|--------------|-----|---------------|
| 1 | Body | 6 | Stem Washer | 11 | Stem Seal |
| 2 | End cap | 7 | Handle | 12 | Handle Sleeve |
| 3 | Ball | 8 | Seat | 13 | Joint Gasket |
| 4 | Seat | 9 | Gland Bush | 14 | Locking Plate |
| 5 | Stem Nut | 10 | Stem Packing | | |

Series E301-30

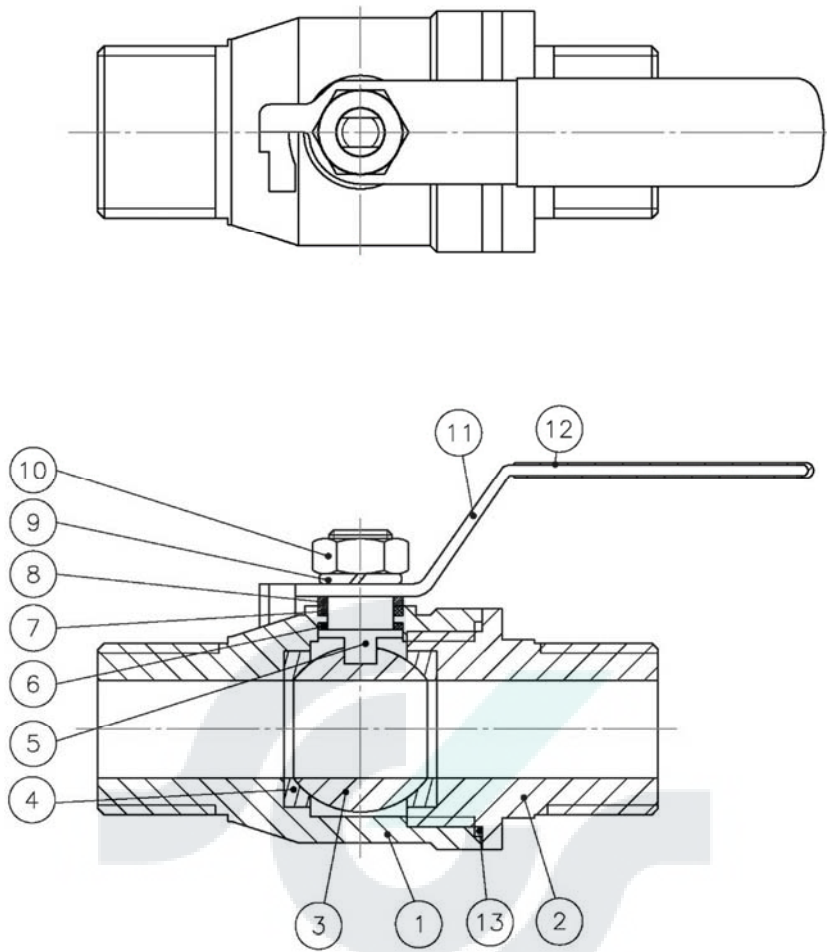

| No. | Part Name | No. | Part Name | No. | Part Name |
|-----|-----------|-----|---------------|-----|---------------|
| 1 | Body | 6 | Thrust Washer | 11 | Handle |
| 2 | End cap | 7 | Stem Packing | 12 | Handle Sleeve |
| 3 | Ball | 8 | Gland Bush | 13 | Joint Gasket |
| 4 | Seat | 9 | Stem Washer | | |
| 5 | Stem Nut | 10 | Stem Nut | | |

2. USE

Life of valve can be prolonged if the valve is used within the rated range, in accordance with pressure, temperature, and corrosion parameters.

3. Manual Operation


The valve's open or closed state is altered by giving the lever a quarter-turn (90-degrees).

— Valve in Open Position: The lever is parallel to the valve or pipeline.

— Valve in Closed Position: The lever is perpendicular to the valve or pipeline.

4. General Information for Installation

- The valve may be fitted in any position on the pipeline.
- To avoid damaging the internal components, such as the seats and ball, the pipeline must be flushed, free of dirt, burrs, and welding residues before installing the valve.
- Use suitable thread sealing material such as Teflon to the pipeline.
- Apply a wrench only on the hexagon of the valve ends. Tightening by using the valve body or handle (lever) can seriously damage the valve.
- In some applications, screwed valves are back welded on site, these valves must be treated as per instructions for weld end valves before back welding.

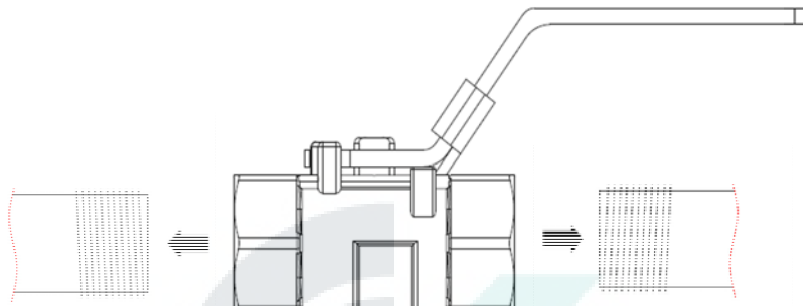

(Figure 1)

5. Disassembly & Cleaning Procedure



OPENING THE VALVE UNDER PRESSURE CAN BE DEADLY. DISMANTLING THE VALVE MUST BE COOLED DOWN AND PRESSURE-FREE. HEAD PROTECTION , PROTECTION GLASSES AND SAFETY SHOES ARE MANDATORY.

CAUTION! Ball valve may be residual fluid in the ball cavity when closed.

If the valve has been used to control hazardous media, it must be decontaminated before disassembly. It is recommended that the following steps are taken for safe removal and reassembly.

- Relieve the line pressure.
- Place valve in half-open position and flush the line to remove any hazardous material from the valve.
- All persons involved in the removal and disassembly of the valve should wear the proper Protective clothing, such as face shield, gloves, etc.



6. Maintenance and Normal Trouble

Most ball valve problems are caused by incorrect installation of the valve or incorrectly installed parts, but causes of ball valve failure may also include:

| No. | Problem | Cause Analysis | Solution |
|-----|-------------------------------------|--|---|
| 1 | Valve leaks during installation | Improper transportation and lifting may result in valve damage. | Only transport the ball valve by suitable means, do not drop it. |
| 2 | Valve leaks during installation | Both ends of the valve are lacking blind flanges. | According to the requirements of pipeline design. |
| 3 | Valve leaks during installation | The valve is misaligned with the pipeline. | According to the plant and pipeline installation standards. |
| 4 | Leakage between the sealing surface | Dirty sealing surface or the sealing surface damaged. | Remove dirt or replace it. |
| 5 | Leakage at stem packing | Insufficient packing pressure or prolonged use can lead to damage to the packing material. | Tighten the bolts evenly to compact the packing or replace packing. |

(Table 1)

7. Safety Notice

| | |
|---|--|
|  | THE EQUIPMENT IS SUBJECT TO PRESSURE, RISK OF SEVERE INJURY OR DEATH. HANDLE CAREFULLY. |
|  | DO NOT EXCEED THE MAXIMUM PERMISSIBLE PRESSURE. |


- Installation work must only be performed by trained personnel.
- Use appropriate protective gear as specified in plant operator's guidelines.
- Choose the installation location and suitable means, the ball valve cannot be used as a foothold or climbing aid.
- Do NOT apply external force to the ball valve.
- Inside diameter of the piping must correspond to the nominal diameter of the ball valve.
- When laying pipelines, it is essential to protect the ball valve body from lateral and bending forces, as well as the influence of vibrations and tension.
- Only mount the ball valve between matching aligned pipelines.
- Do NOT connect the system before valve pipeline installation to the earthing connection has been inspected, examined, and approved by the client.
- The pipeline should be free of any potentially explosive environments.
- Do NOT allow dust layers on the transportation media as it could charge the valve during high velocity of transportation. The flammable material shall be prohibited to be used on the valve.
- Use only in accordance with the specifications. (Refer Table 2)
- Any servicing work and repairs not described in the installation, operating and maintenance instructions must not be performed without consulting the manufacturer first.

8. Transportation and Storage

- Transport the ball valve using appropriate methods; throwing or dropping is prohibited.
- Dispose of packaging materials in accordance with relevant local or national disposal regulations/environmental protection laws.

9. Appendix

— Pressure-Temperature Chart

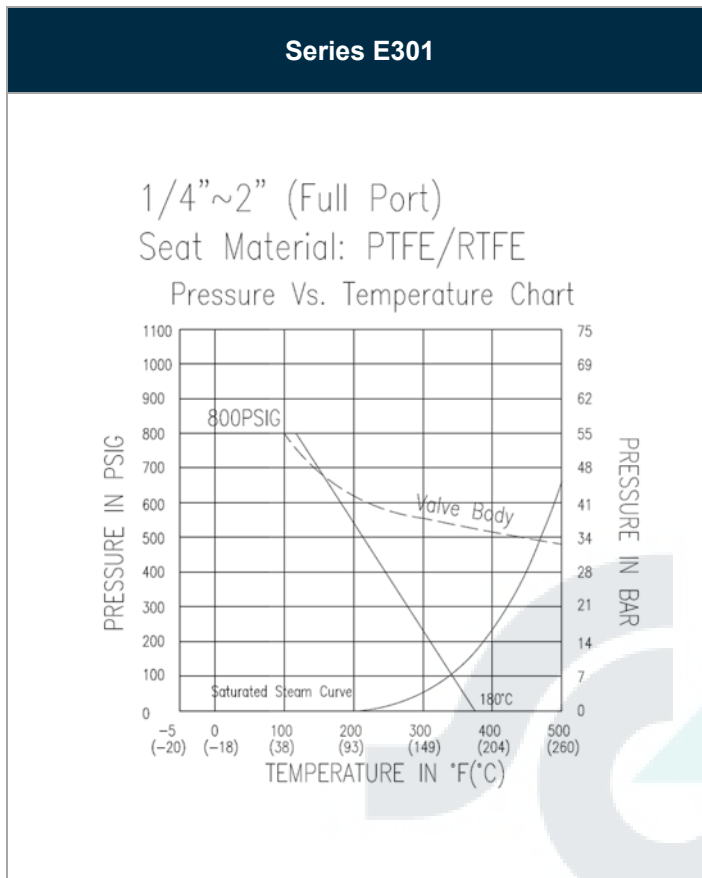

(Table 2)